


PVE Root Rake Installation

Dozer & Excavator Machines



Thank you for purchasing a PVE Root Rake! Please follow the guidelines below to assist you in attaching the rake to your dozer. Be certain to support the dozer blade with jack stands or wood blocks at the appropriate height needed to line up the root rake support beam with the cutting edge on the blade. Support the rake with a hoist or equivalent lift support to safely secure the rake in position during the installation process.

Your PVE root rake will include the following: Rake, 2 Pins, 2 Mounting Brackets

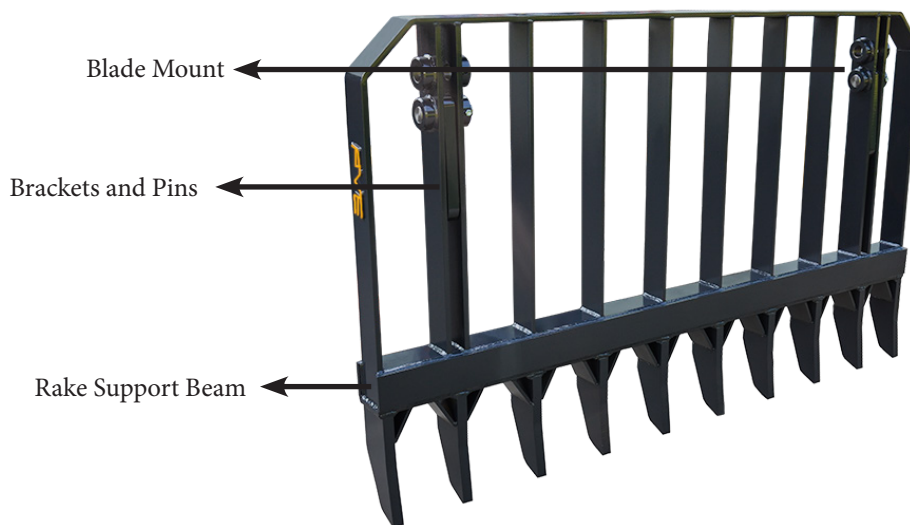

1. Position the rake against the blade face as shown below. Make sure the rake support beam is placed at a level so the cutting edge of the dozer blade is pushing against it.

2. With the rake and blade both supported in position, move the brackets into location as shown and weld in place. Some trimming of the brackets may be required to best fit the contour of your blade.

